


MACO PROTECT DOOR LOCKS

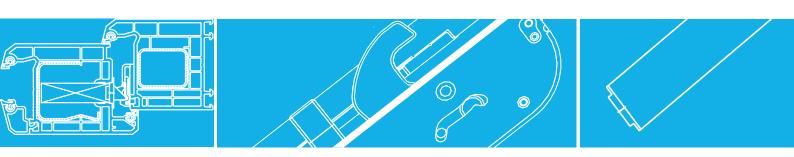

LEVER OPERATED HOOK / HOOK-BOLT COMBINATION TOP-HAT FACEPLATE single and double door locks PVC

Legend



Backset - BS



Spindle Centre - SC



Handle Height - HH



Cutting Range



Profile Front Face

Hook-Bolt

Hook-Bolt Combination

Hook

Hook Locking

Bolt

Bolt Locking



Contents

Instructions for Transportation	4
Installation Instructions	5
Latch Reversal	8
Lockcase Dimensions	9
Striker Routing Details	12
Striker Plate Positions	15




Transportation Instructions

For safety during transportation it is recommended that spacer blocks or run up wedges are fitted to prevent the sash from moving.


If run up wedges are fitted it is good practice to leave them in place following the installation of the door.

A Positions for transport blocks.

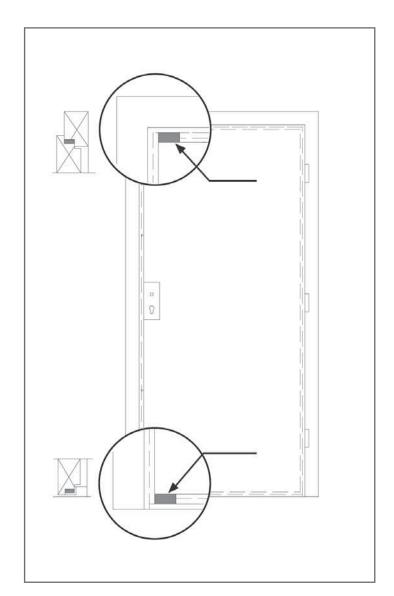




Installation Instructions

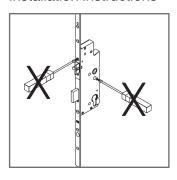


1 The lockcase must not be opened!




2 All routing and drilling must be completed before the lock is fitted!

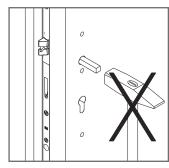


3 Do not force the spindle bar though the lockcase!

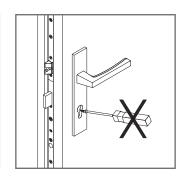

4 The lockcase must only be operated by a suitable key!

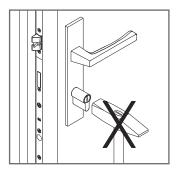

5 Do not apply force when fitting the profile cylinder!

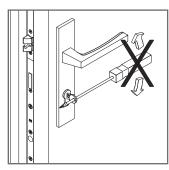


6 Do not apply force through external leverage in order to turn the key!



7 Do not operate the handle and key at the same time!




Installation Instructions

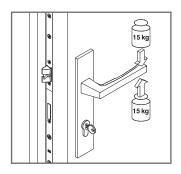

1 The handle operates in a vertical movement (max force 15Kg) to operate!




2 Any damaged components must be replaced.

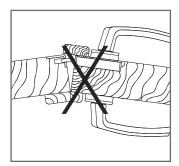


On double doors the active door must be operated before the slave door!



The dead bolt must not be thrown when the door is open!

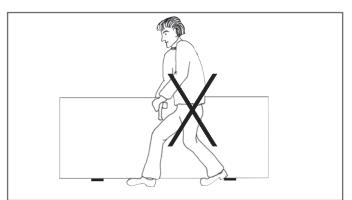


(5) The door must not be carried by the handle set!

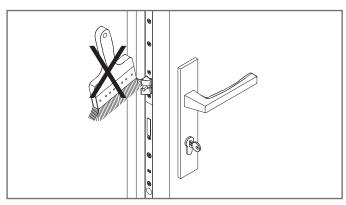

6 Do not paint or lacquer any part of the lock!




Installation Instructions

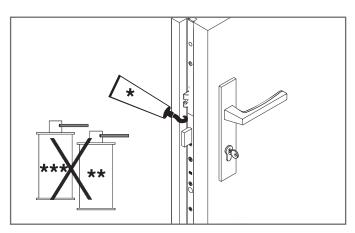

- * Petroleum Jelly
- ** Anti Rust Spray
- *** Silicone Spray

No lubricating oils, Anti Rust or Silicone Sprays etc should be used! The central lockcase is supplied with a permanent high quality lubricant and does not require further lubrication!

Latch and Deadbolt requires lubrication once a year.

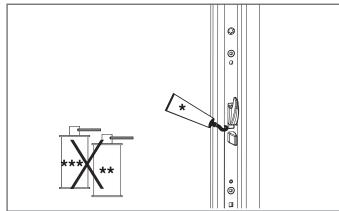


(2) Hook-Bolt, Hook, Bolt requires lubrication once a year.


Lubricate with a light grease such as a petroleum jelly.




Installation Notes

Latch Reversal

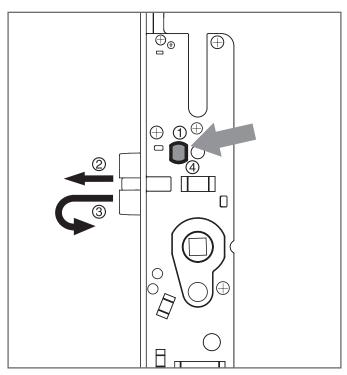

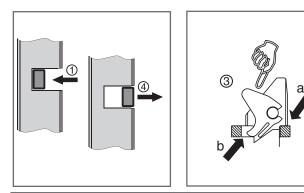

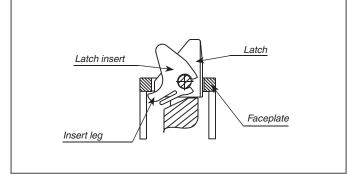


- 1 Push the button.
- 2 Remove the latch.
- 3 Reverse the latch and replace it into the face-plate slot (a). Ensure that the leg of the latch insert locates under the faceplate (b). Then push the latch fully in.
- 4 Ensure that the button fully returns.



Installation Notes

Positioning the latch and dead bolt strike.

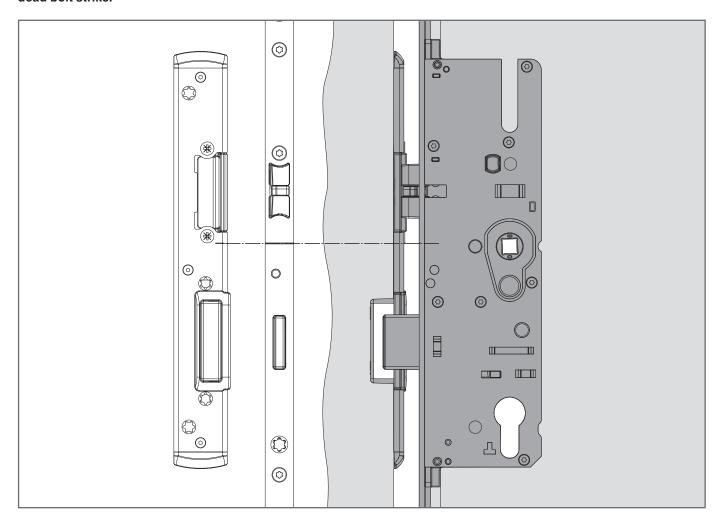


Gasket compression adjustment +/- 1 mm


Location
Faceplate Centre Line = Latch
Plate Centre Line



Installation Notes

Positioning Hook-Bolt-Striker

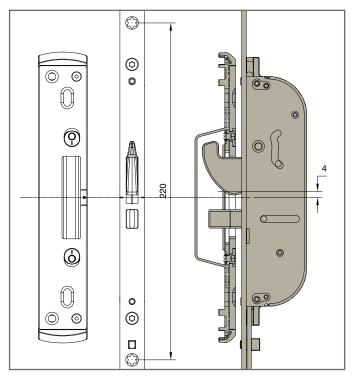

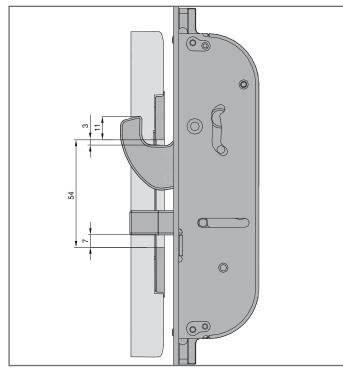


Gasket compression adjustment +/- 1.5 mm


Location
Faceplate Centre Line = Top
Hook Strike Centre Line



Routing Detail

Lockcase Machining

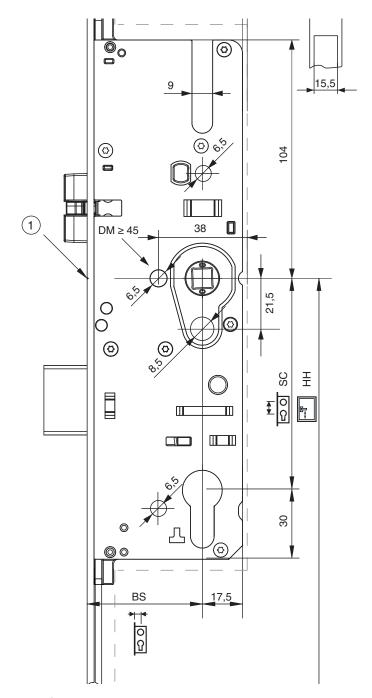

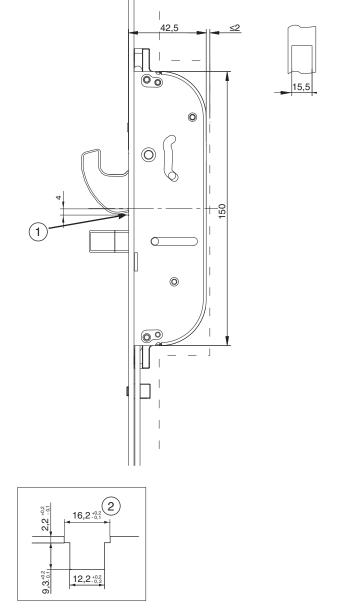



- (1) Faceplate Centre Line
- 2 Eurogroove



Routing and Drilling

- 1 Latch and Dead Bolt Strike
- 2 Hook-Bolt Striker

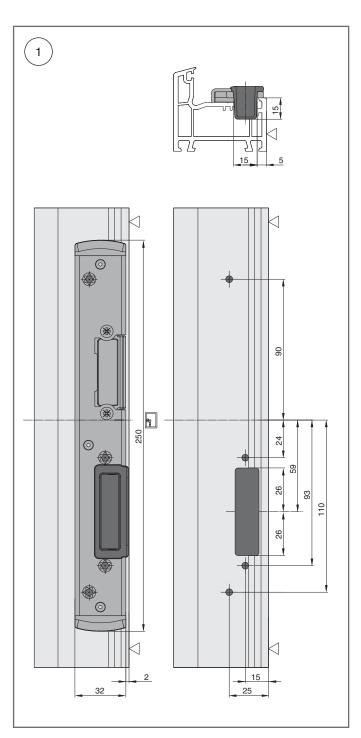


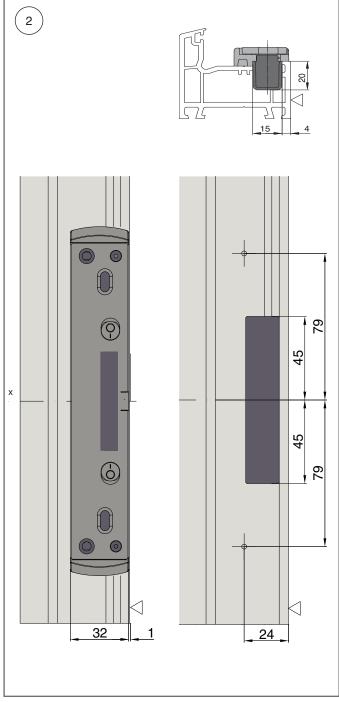



Routing and Drilling


3 Double Slot Shootbolt Striker

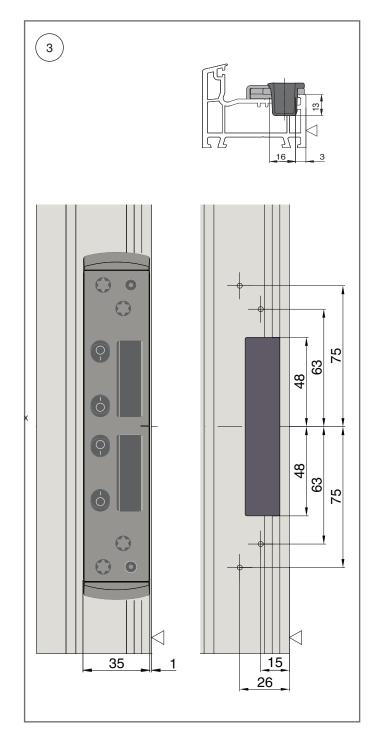



Lockcase Routing Positions


- 1 2 Hook, 2 i.S.
- 2 Hook-Bolt, 2 i.S.
- (3) 2 Hook
- 4 2 Hook-Bolt

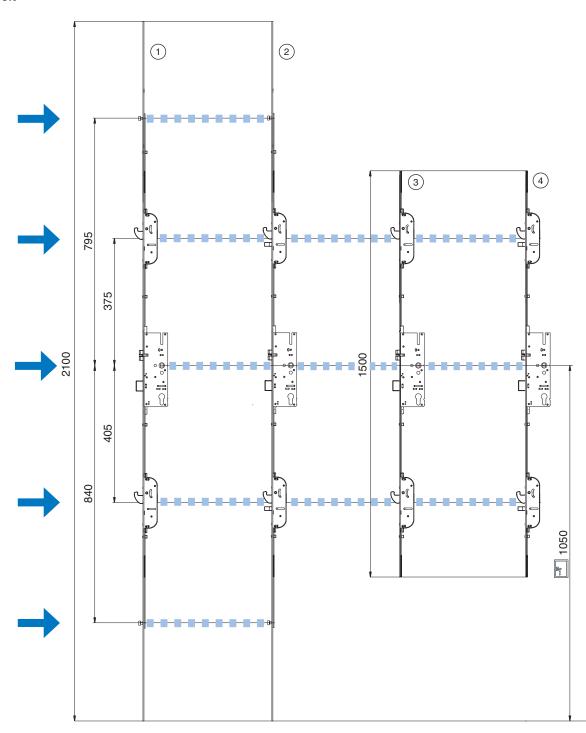






Striker Plate Positions

- 1 2 Hook, 2 i.S.
- (2) 2 Hook-Bolt, 2 i.S.
- (3) 2 Hook
- 4 2 Hook-Bolt

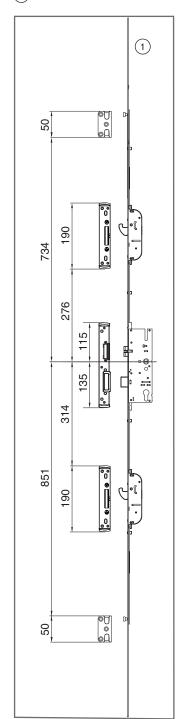

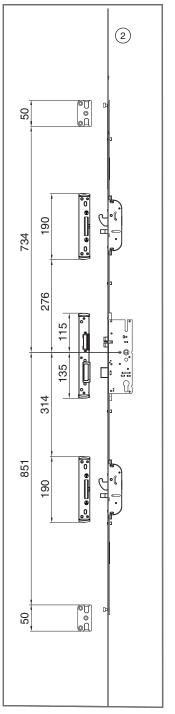

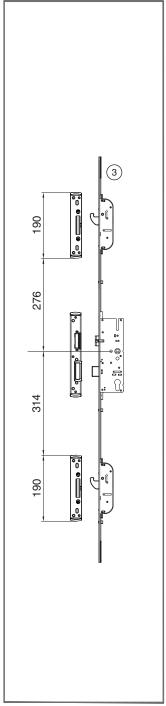

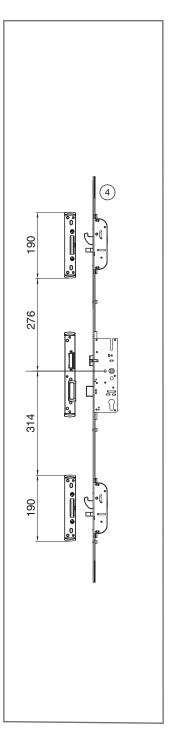



MACO DOOR & WINDOW
HARDWARE (U.K.) LTD
EUROLINK INDUSTRIAL CENTRE
CASTLE ROAD
SITTINGBOURNE
KENT, ME10 3LY
TEL +44 (0)1795 433900
FAX +44 (0)1795 433901
enquiry@macouk.net
www.macouk.net