



Cam Adjustment

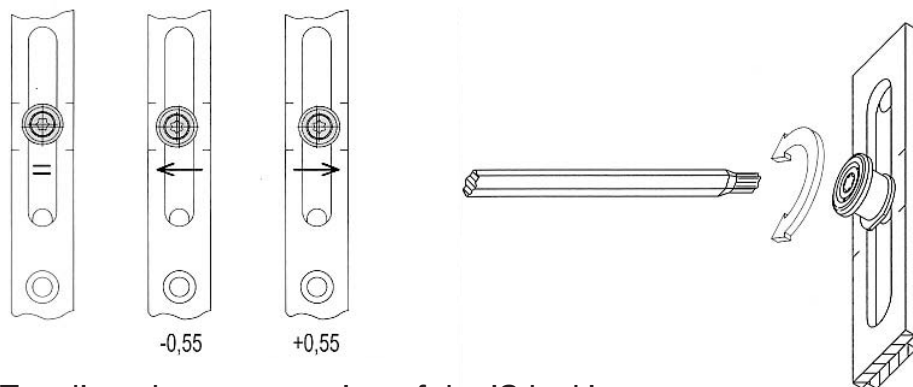

To adjust the compression of the iS locking cam use a Torx T15 key to rotate the locking cams.

Packing Instructions

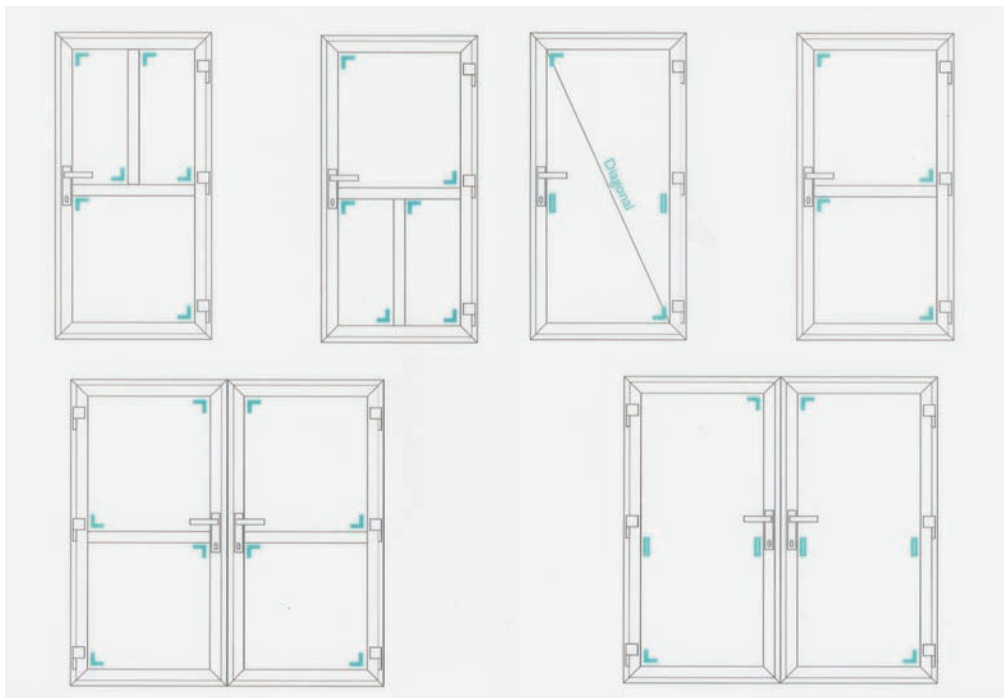


Installation Guide for Maco Multipoint Door Locks




After installation of the door has been completed and the door adjusted it is important to recheck the striker plate positions in relation to the locking points (see over) slacken screws and adjust strikes as required.

Screws should be re tightened before testing the operation.

It may also be necessary to adjust the compression setting these can be done with a 4 mm Allen key for the hooks and a T15 Torx key for the cams.

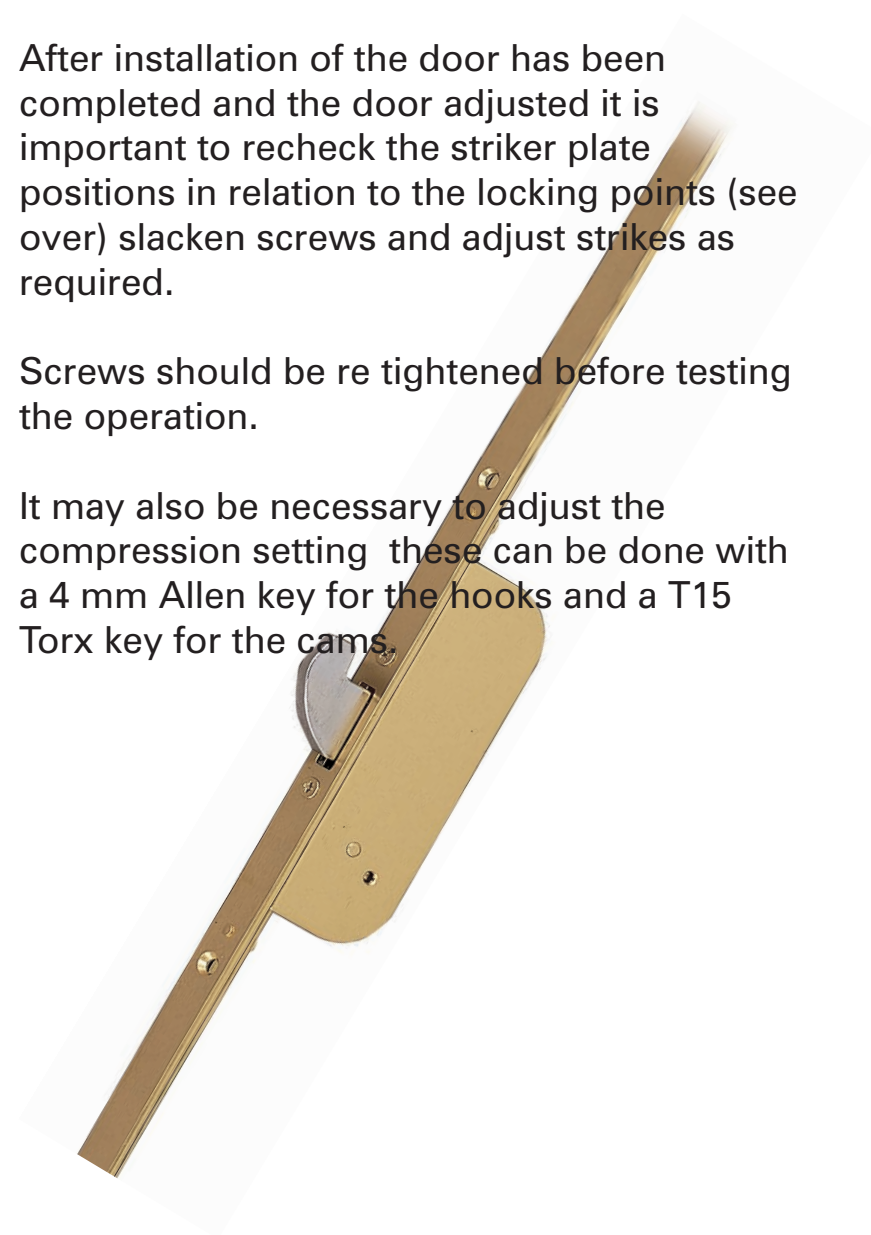


Hook Bolt Position

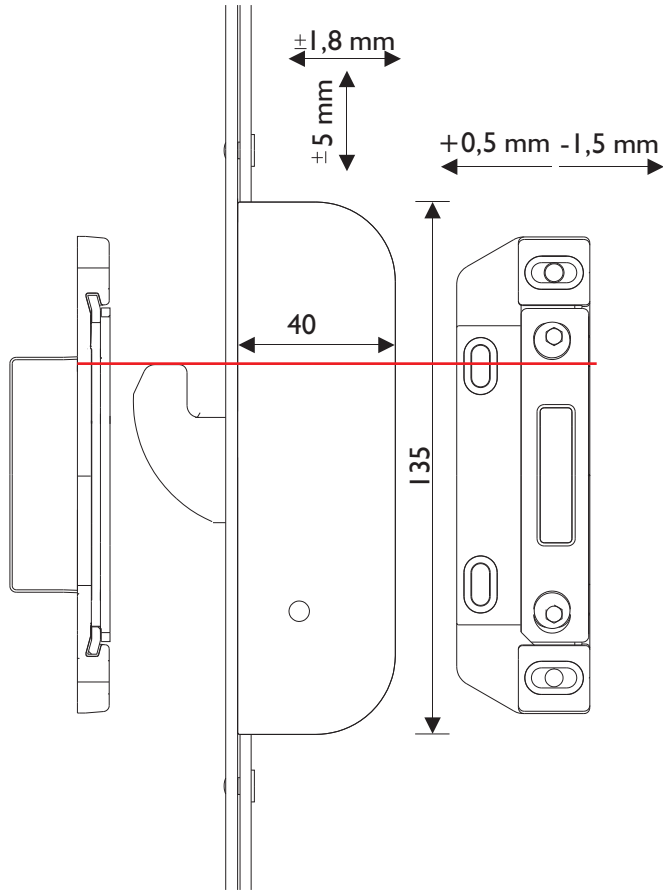


When packing the door please ensure that the top of the hook is aligned with the top line on the side of the hook striker plate.

Latch Plate Alignment

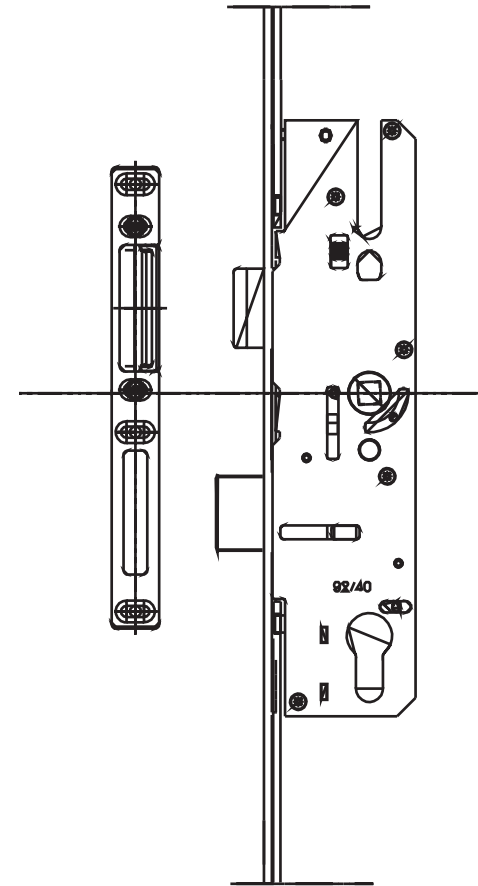

The centre line of the lock and striker plate must be opposite each other.

Cam Alignment

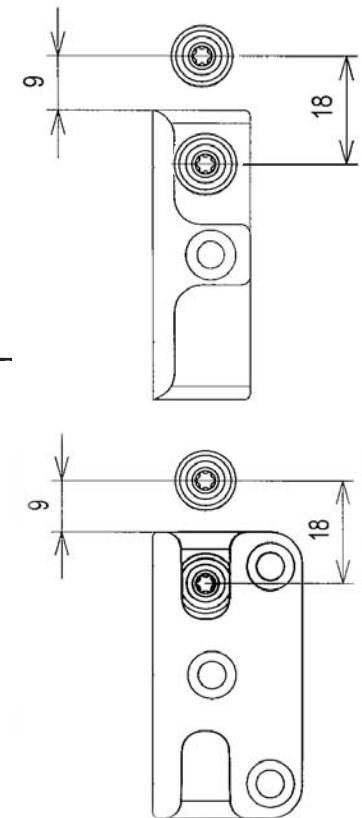

The correct position for the cam when used as either a std compression or security cam.