


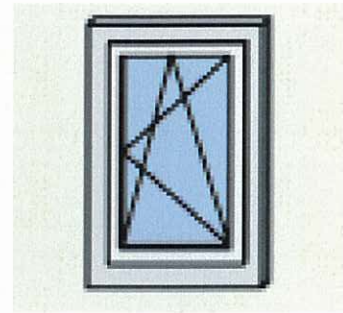


**tilt and turn single sash window
SRW 280 - 1500, SRH 500 - 2350
Koemmerling Gold**



⑳ №	Corner El.		
52513	A	431 - 1650	370 - 2350
52514	B	280 - 430	370 - 2350
54796	C for night vent	400 - 1650	370 - 2350

№	Sissor Stay Hinge PVC	
52480	with positioning pin 3mm silver	⑦
52486	Rebated Sissor Stay Arm 12/20-13	⑥
94491	Spindle Bar	⑧

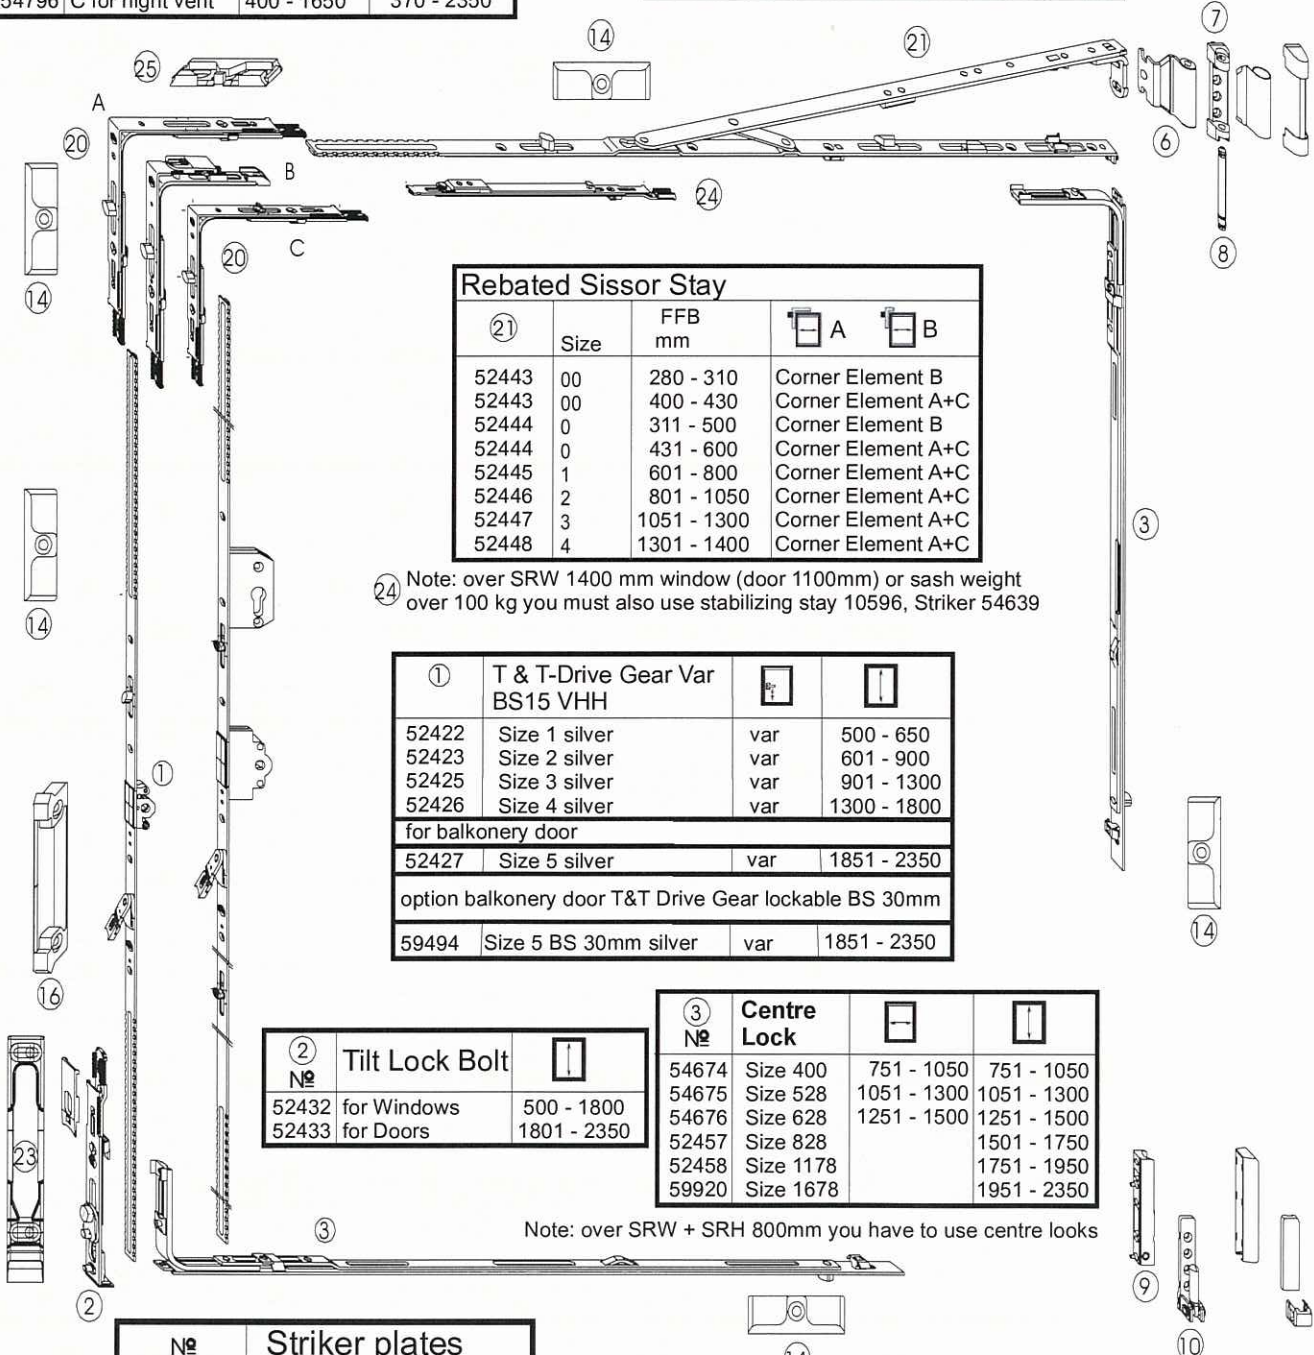

Rebated Sissor Stay			
⑳	Size	FFB mm	
52443	00	280 - 310	Corner Element B
52443	00	400 - 430	Corner Element A+C
52444	0	311 - 500	Corner Element B
52444	0	431 - 600	Corner Element A+C
52445	1	601 - 800	Corner Element A+C
52446	2	801 - 1050	Corner Element A+C
52447	3	1051 - 1300	Corner Element A+C
52448	4	1301 - 1400	Corner Element A+C

⑳ Note: over SRW 1400 mm window (door 1100mm) or sash weight over 100 kg you must also use stabilizing stay 10596, Striker 54639

①	T & T-Drive Gear Var BS15 VHH		
52422	Size 1 silver	var	500 - 650
52423	Size 2 silver	var	601 - 900
52425	Size 3 silver	var	901 - 1300
52426	Size 4 silver	var	1300 - 1800
for balkonery door			
52427	Size 5 silver	var	1851 - 2350
option balkonery door T&T Drive Gear lockable BS 30mm			
59494	Size 5 BS 30mm silver	var	1851 - 2350

㉑ №	Tilt Lock Bolt	
52432	for Windows	500 - 1800
52433	for Doors	1801 - 2350

㉓ №	Centre Lock		
54674	Size 400	751 - 1050	751 - 1050
54675	Size 528	1051 - 1300	1051 - 1300
54676	Size 628	1251 - 1500	1251 - 1500
52457	Size 828		1501 - 1750
52458	Size 1178		1751 - 1950
59920	Size 1678		1951 - 2350

Note: over SRW + SRH 800mm you have to use centre locks

№	Striker plates
34220	Striker ⑭
33258	Tilt striker right ㉒
33259	Tilt striker left
95112	Sash lifter ⑮
25312	Night vent Striker ㉕

№	Corner Support
52478	3mm positioning pin ⑨

№	Pivot Post
52483	3mm positioning pin ⑩