


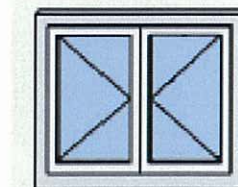


French casement window Turn only
SRW 280 - 1300, SRH 1001 - 2350
Koemmerling Gold



Nº	Turn only top hinge	Nº	End piece top
52462	for PVC (5)	11032	with Striker (18)

Nº	Sissor Stay Hinge PVC	
52480	with positioning pin 3mm silver	(7)
52486	Rebated Sissor Stay Arm 12/20-13	(6)
94491	Spindle Bar	(8)

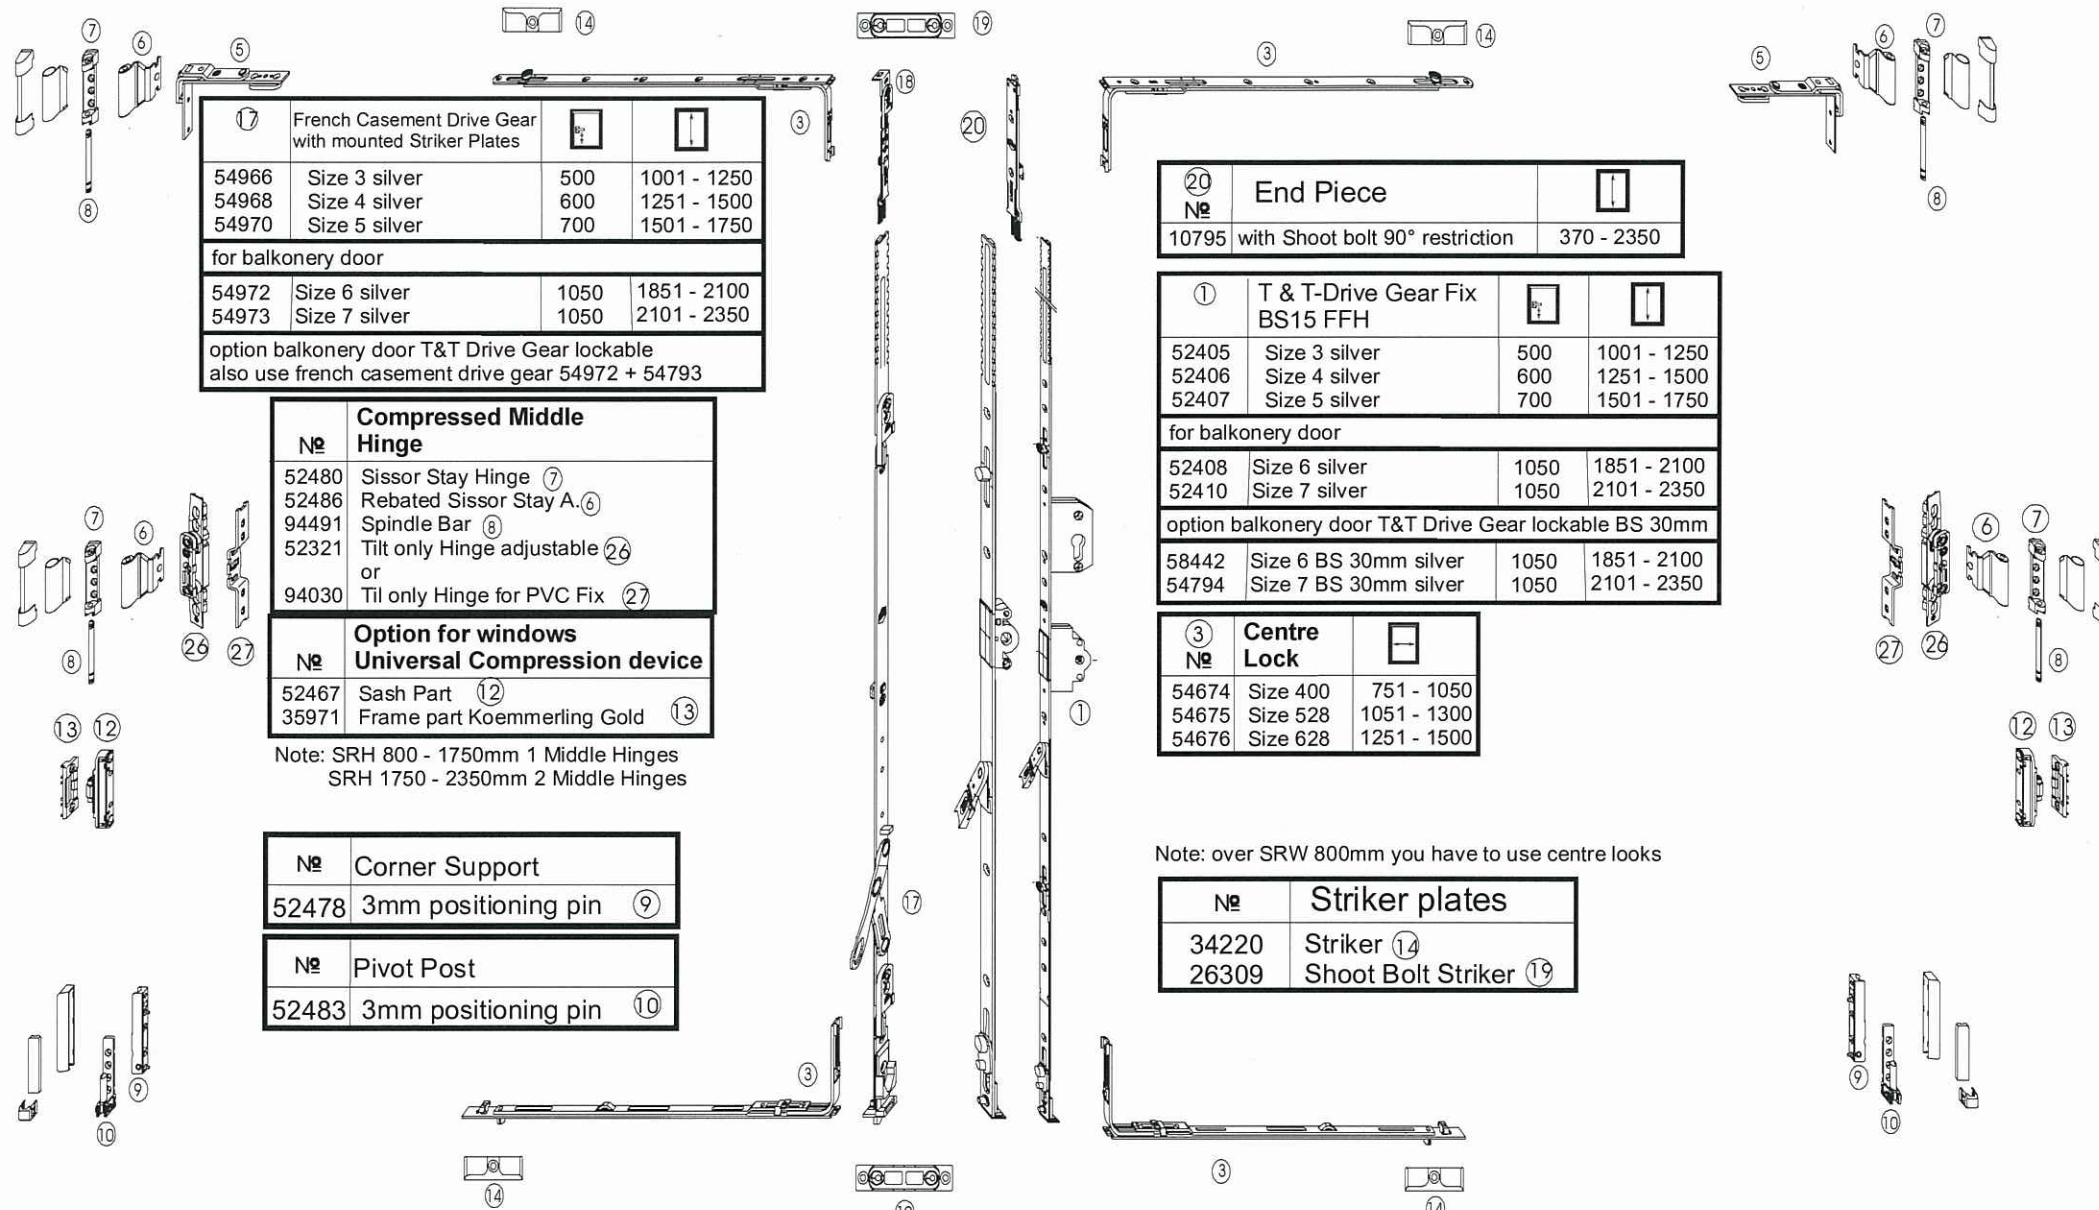

(1)	French Casement Drive Gear with mounted Striker Plates		
54966	Size 3 silver	500	1001 - 1250
54968	Size 4 silver	600	1251 - 1500
54970	Size 5 silver	700	1501 - 1750
for balkonery door			
54972	Size 6 silver	1050	1851 - 2100
54973	Size 7 silver	1050	2101 - 2350
option balkonery door T&T Drive Gear lockable also use french casement drive gear 54972 + 54793			

Compressed Middle Hinge	
Nº	Sissor Stay Hinge (7)
52486	Rebated Sissor Stay A. (6)
94491	Spindle Bar (8)
52321	Tilt only Hinge adjustable (26) or
94030	Til only Hinge for PVC Fix (27)
Option for windows Universal Compression device	
Nº	Sash Part (12)
52467	Sash Part (12)
35971	Frame part Koemmerling Gold (13)

Note: SRH 800 - 1750mm 1 Middle Hinges
SRH 1750 - 2350mm 2 Middle Hinges

Nº	Corner Support
52478	3mm positioning pin (9)
Nº	Pivot Post
52483	3mm positioning pin (10)

(20)	End Piece	
Nº	with Shoot bolt 90° restriction	(370 - 2350)
10795		

(1)	T & T-Drive Gear Fix BS15 FFH		
52405	Size 3 silver	500	1001 - 1250
52406	Size 4 silver	600	1251 - 1500
52407	Size 5 silver	700	1501 - 1750
for balkonery door			
52408	Size 6 silver	1050	1851 - 2100
52410	Size 7 silver	1050	2101 - 2350
option balkonery door T&T Drive Gear lockable BS 30mm			
58442	Size 6 BS 30mm silver	1050	1851 - 2100
54794	Size 7 BS 30mm silver	1050	2101 - 2350

(3)	Centre Lock	
Nº		
54674	Size 400	751 - 1050
54675	Size 528	1051 - 1300
54676	Size 628	1251 - 1500

Note: over SRW 800mm you have to use centre looks

Nº	Striker plates
34220	Striker (14)
26309	Shoot Bolt Striker (19)