


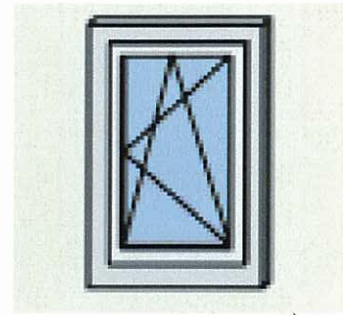


**tilt and turn single sash window
SRW 280 - 1500, SRH 1001 - 2350
Rehau S921 Prestige Design**



⑳ №	Corner El.		
52513	A	431 - 1650	370 - 2350
52514	B	280 - 430	370 - 2350
54796	C for night vent	400 - 1650	370 - 2350

№	Sissor Stay Hinge PVC	
52480	with positioning pin 3mm silver	⑦
52486	Rebated Sissor Stay Arm 12/20-13	⑥
94491	Spindle Bar	⑧

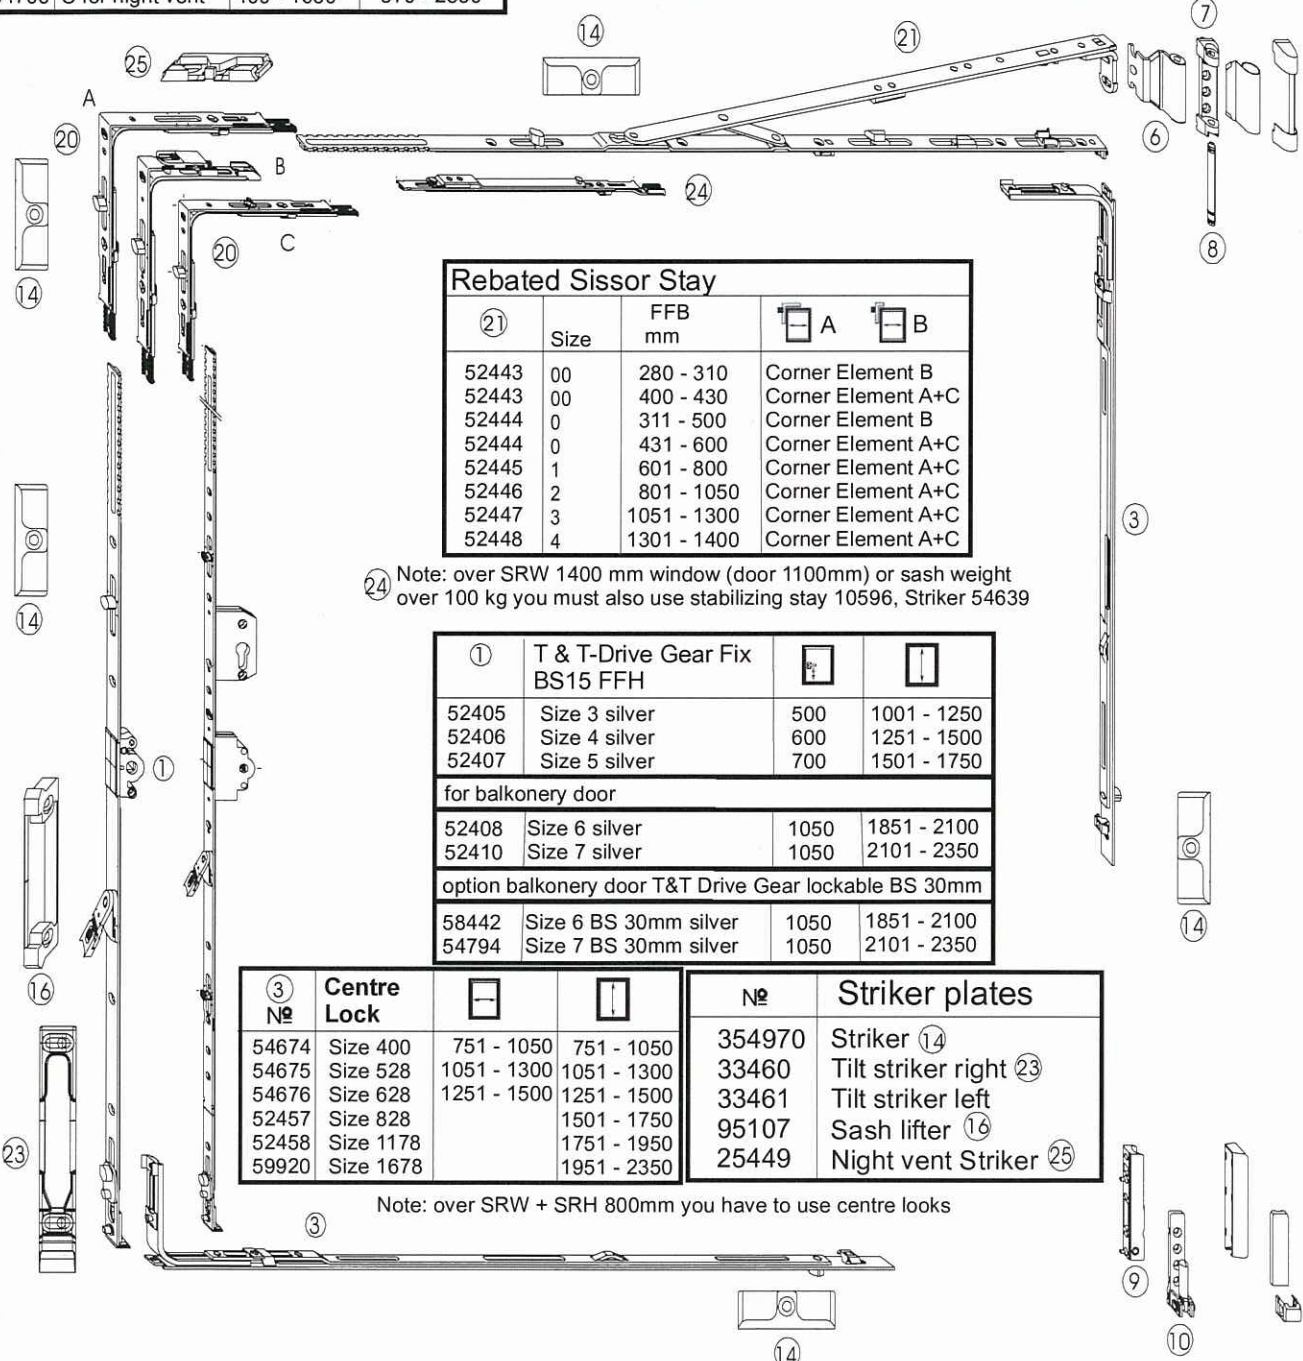

Rebated Sissor Stay			
⑳	Size	FFB mm	
52443	00	280 - 310	Corner Element B
52443	00	400 - 430	Corner Element A+C
52444	0	311 - 500	Corner Element B
52444	0	431 - 600	Corner Element A+C
52445	1	601 - 800	Corner Element A+C
52446	2	801 - 1050	Corner Element A+C
52447	3	1051 - 1300	Corner Element A+C
52448	4	1301 - 1400	Corner Element A+C

⑳ Note: over SRW 1400 mm window (door 1100mm) or sash weight over 100 kg you must also use stabilizing stay 10596, Striker 54639

①	T & T-Drive Gear Fix BS15 FFH		
52405	Size 3 silver	500	1001 - 1250
52406	Size 4 silver	600	1251 - 1500
52407	Size 5 silver	700	1501 - 1750
for balkonery door			
52408	Size 6 silver	1050	1851 - 2100
52410	Size 7 silver	1050	2101 - 2350
option balkonery door T&T Drive Gear lockable BS 30mm			
58442	Size 6 BS 30mm silver	1050	1851 - 2100
54794	Size 7 BS 30mm silver	1050	2101 - 2350

③ №	Centre Lock			№	Striker plates
54674	Size 400	751 - 1050	751 - 1050	354970	Striker ⑭
54675	Size 528	1051 - 1300	1051 - 1300	33460	Tilt striker right ⑳
54676	Size 628	1251 - 1500	1251 - 1500	33461	Tilt striker left
52457	Size 828		1501 - 1750	95107	Sash lifter ⑯
52458	Size 1178		1751 - 1950	25449	Night vent Striker ㉕
59920	Size 1678		1951 - 2350		

Note: over SRW + SRH 800mm you have to use centre looks

№	Pivot Post	№	Corner Support
52483	3mm positioning pin ⑩	52478	3mm positioning pin ⑨