


# tilt and turn single sash window SRW 280 - 1500, SRH 500 - 2350

## Rehan S921 Prestige Design

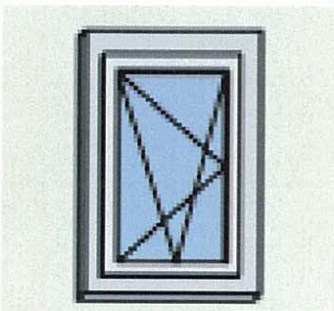

TECHNIK DIE BEWEGT



Nº	Corner El.		
52513 A	431 - 1650	370 - 2350	
52514 B	280 - 430	370 - 2350	
54796 C	for night vent	400 - 1650	

Nº	Sissor Stay Hinge PVC		
52480	with positioning pin 3mm silver	7	
52486	Rebated Sissor Stay Arm 12/20-13	6	
94491	Spindle Bar	8	

21	FFB	Size	
52443 00	Corner Element B	280 - 310	
52443 00	Corner Element A+C	400 - 430	
52444 0	Corner Element B	311 - 500	
52444 0	Corner Element A+C	431 - 600	
52445 1	Corner Element A+C	601 - 800	
52446 2	Corner Element A+C	801 - 1050	
52447 3	Corner Element A+C	1051 - 1300	
52448 4	Corner Element A+C	1301 - 1400	

24 Note: over SRW 1400 mm window (door 1100mm) or sash weight over 100 kg you must also use stabilizing stay 10596, Striker 54639

1	T & T-Drive Gear Var		
52422	Size 1 silver	var	500 - 650
52423	Size 2 silver	var	601 - 900
52425	Size 3 silver	var	901 - 1300
52426	Size 4 silver	var	1300 - 1800
52427	Size 5 silver	var	1851 - 2350
option balcony door T&T Drive Gear lockable BS 30mm			
59494	Size 5 BS 30mm silver	var	1851 - 2350

3	Nº	Lock	
54674	Size 400	751 - 1050	751 - 1050
54675	Size 528	1051 - 1300	1051 - 1300
54676	Size 628	1251 - 1500	1251 - 1500
52457	Size 828		1501 - 1750
52458	Size 1178		1751 - 1950
59920	Size 1678		1951 - 2350

2	Tilt Lock Bolt	
52432	for Windows	500 - 1800
52433	for Doors	1801 - 2350

Nº	Striker plates
354970	Striker 14
33460	Tilt striker right 23
33461	Tilt striker left 16
95107	Sash lifter 16
25449	Night vent Striker 25

Nº	Corner Support	
52478	3mm positioning pin	9
Nº	Pivot Post	
52483	3mm positioning pin	10

Robert Reisinger 19.07.2007

