


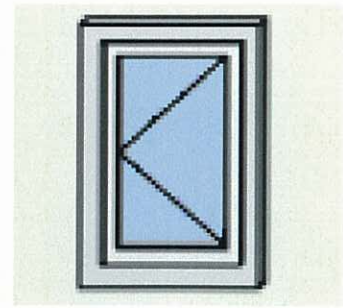


**turn only single sash window**  
**SRW 280 - 1500, SRH 1001 - 2350**  
**Rehau S921 Prestige Design**



20 №	End Piece	
10538	with 90° restriction	370 - 2350

№	Sissor Stay Hinge PVC	
52480	with positioning pin 3mm silver	7
52486	Rebated Sissor Stay Arm 12/20-13	6
94491	Spindle Bar	8

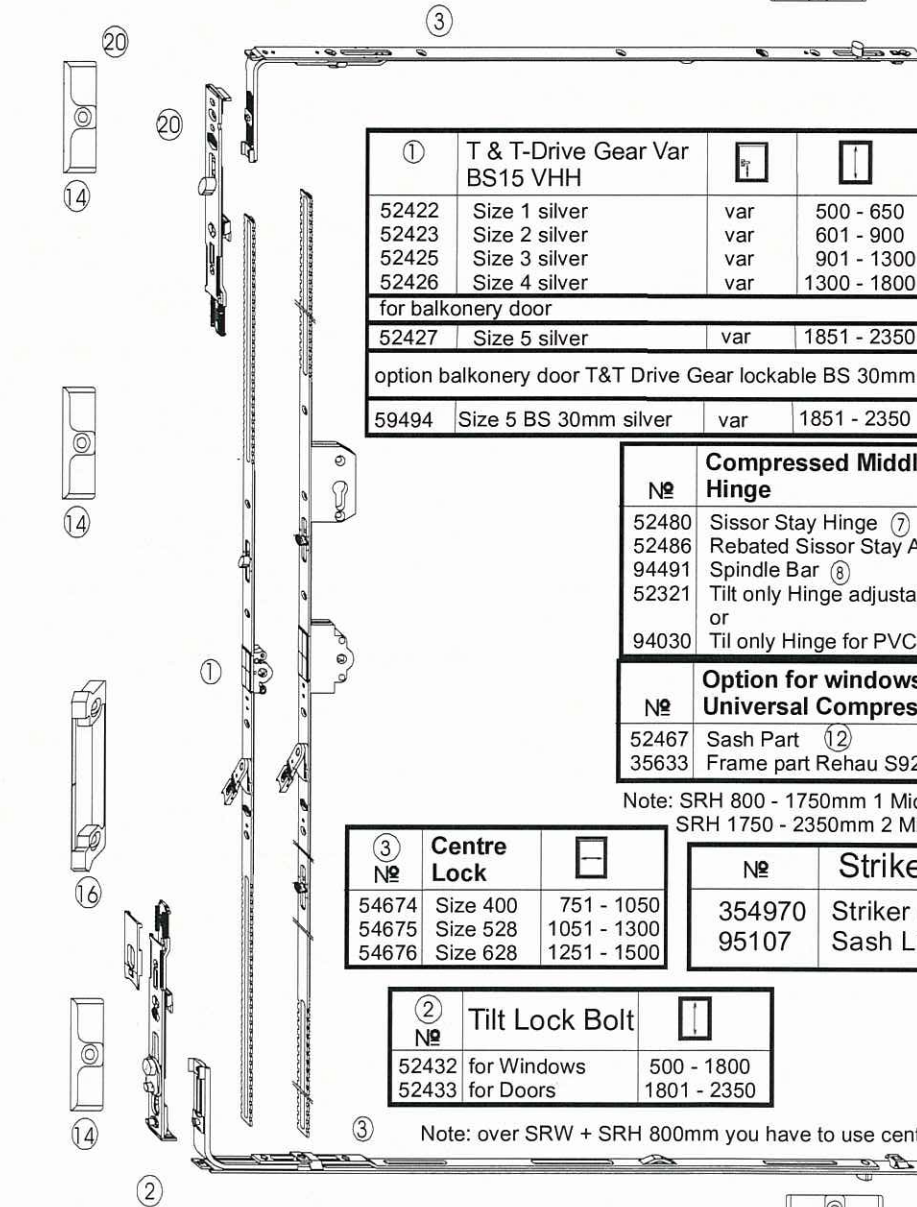

1	T & T-Drive Gear Var BS15 VHH		
52422	Size 1 silver	var	500 - 650
52423	Size 2 silver	var	601 - 900
52425	Size 3 silver	var	901 - 1300
52426	Size 4 silver	var	1300 - 1800
for balkonery door			
52427	Size 5 silver	var	1851 - 2350
option balkonery door T&T Drive Gear lockable BS 30mm			
59494	Size 5 BS 30mm silver	var	1851 - 2350

№	Turn only top hinge	
52462	for PVC	5

№	Compressed Middle Hinge	
52480	Sissor Stay Hinge	7
52486	Rebated Sissor Stay A.	6
94491	Spindle Bar	8
52321	Tilt only Hinge adjustable	26
or		
94030	Til only Hinge for PVC Fix	27
№	Option for windows Universal Compression device	
52467	Sash Part	12
35633	Frame part Rehau S921	13

Note: SRH 800 - 1750mm 1 Middle Hinges  
 SRH 1750 - 2350mm 2 Middle Hinges

3	Centre Lock	
54674	Size 400	751 - 1050
54675	Size 528	1051 - 1300
54676	Size 628	1251 - 1500

№	Striker plates	
354970	Striker	14
95107	Sash Lifter	16

2	Tilt Lock Bolt	
52432	for Windows	500 - 1800
52433	for Doors	1801 - 2350

Note: over SRW + SRH 800mm you have to use centre looks

№	Pivot Post	№	Corner Support
52483	3mm positioning pin	10	52478
			3mm positioning pin
			9