


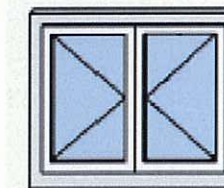


French casement window Turn only  
 SRW 280 - 1300, SRH 1001 - 2350  
 Rehau S921 Prestige Design



Nº	Turn only top hinge	Nº	End piece top
52462	for PVC (5)	11032	with Striker (18)

Nº	Sissor Stay Hinge PVC
52480	with positioning pin 3mm silver (7)
52486	Rebated Sissor Stay Arm 12/20-13 (6)
94491	Spindle Bar (8)

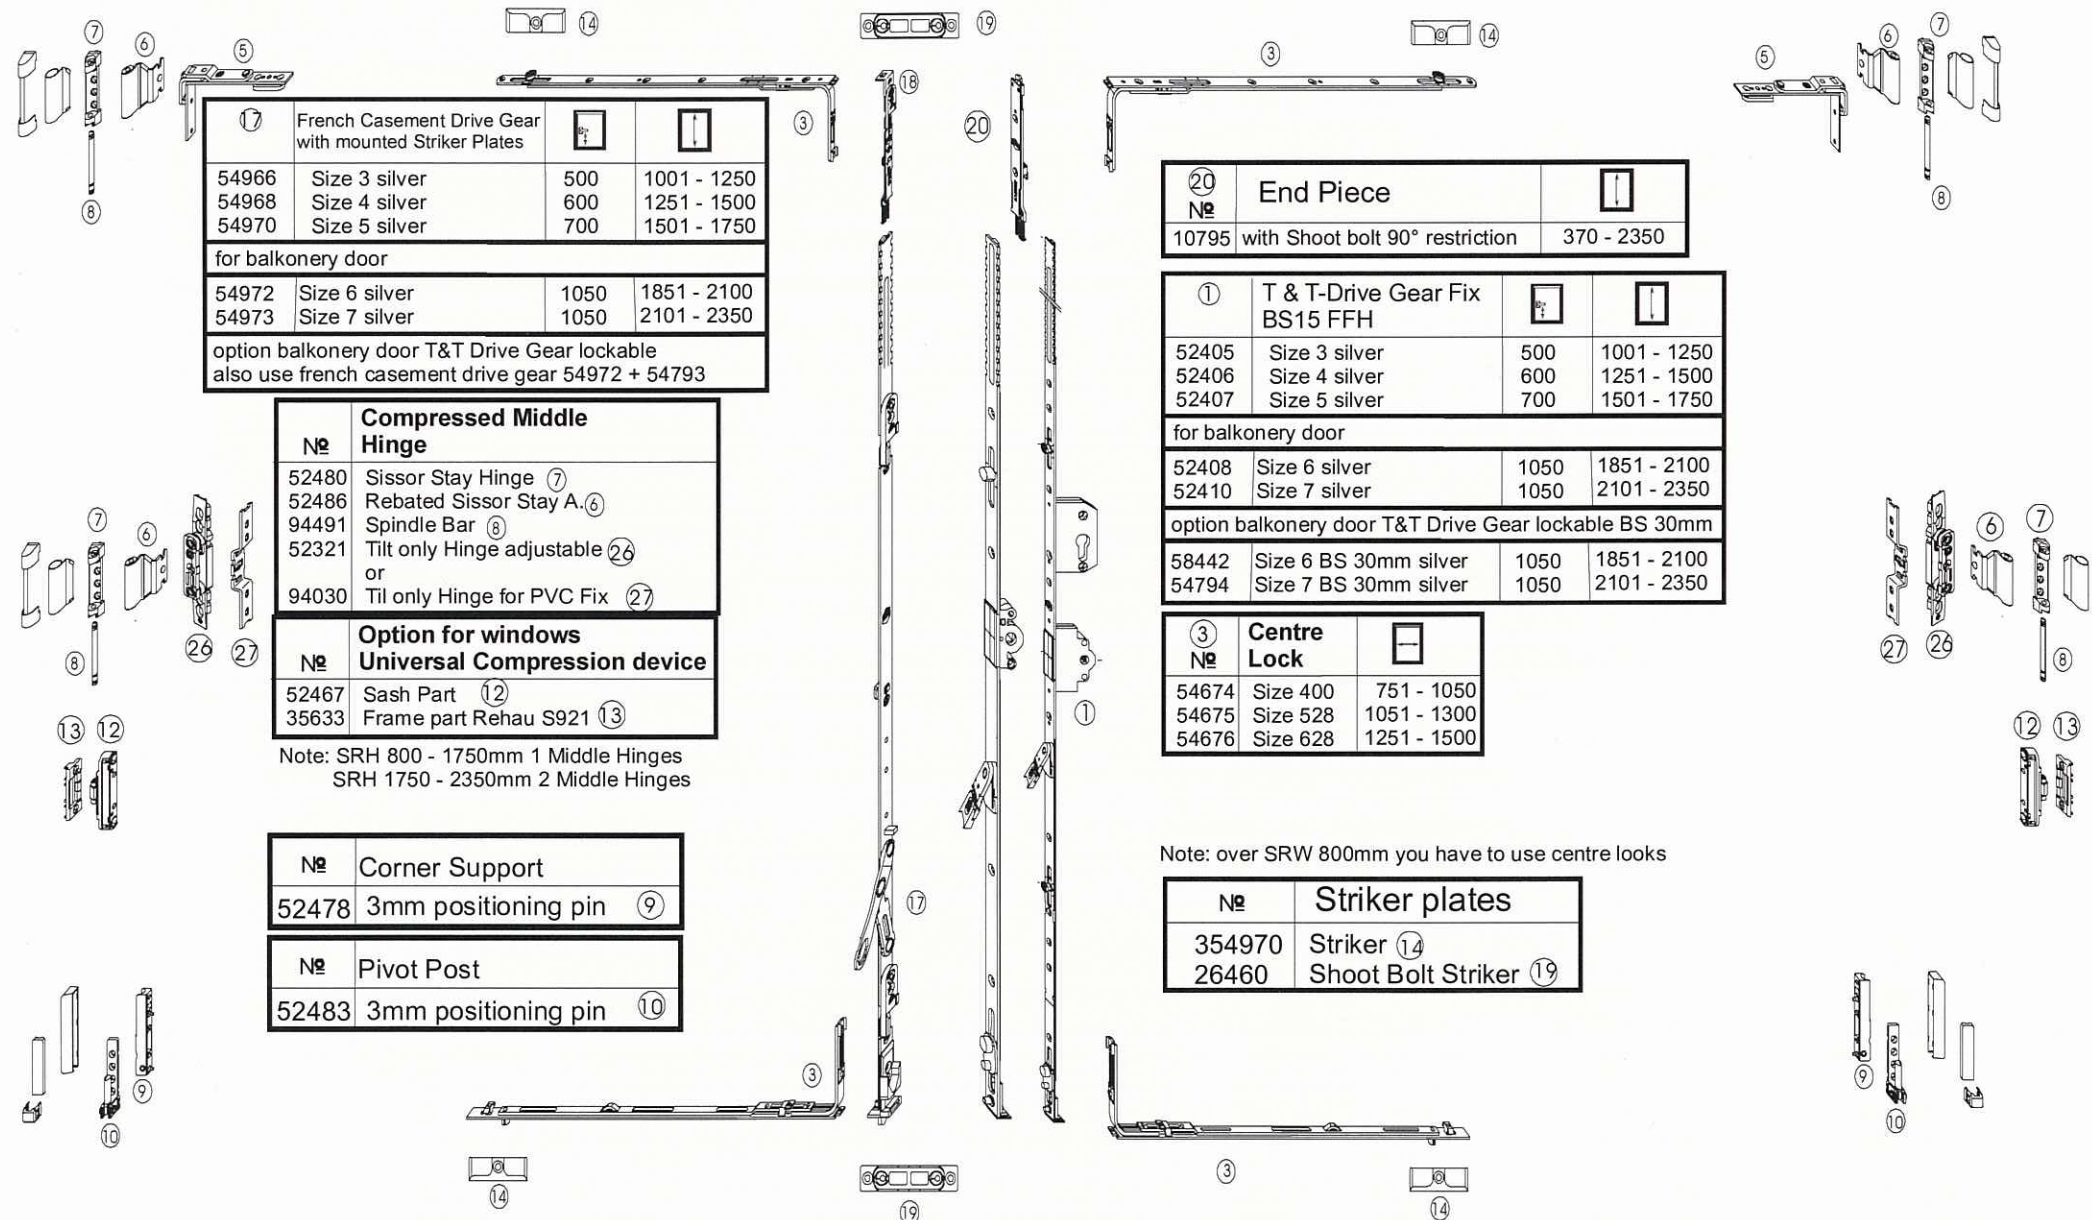

1	French Casement Drive Gear with mounted Striker Plates		
54966	Size 3 silver	500	1001 - 1250
54968	Size 4 silver	600	1251 - 1500
54970	Size 5 silver	700	1501 - 1750
for balkonery door			
54972	Size 6 silver	1050	1851 - 2100
54973	Size 7 silver	1050	2101 - 2350
option balkonery door T&T Drive Gear lockable also use french casement drive gear 54972 + 54793			

<b>Compressed Middle Hinge</b>	
Nº	Description
52480	Sissor Stay Hinge (7)
52486	Rebated Sissor Stay A. (6)
94491	Spindle Bar (8)
52321	Tilt only Hinge adjustable (26) or
94030	Til only Hinge for PVC Fix (27)
<b>Option for windows Universal Compression device</b>	
Nº	Description
52467	Sash Part (12)
35633	Frame part Rehau S921 (13)

Note: SRH 800 - 1750mm 1 Middle Hinges  
 SRH 1750 - 2350mm 2 Middle Hinges

<b>Corner Support</b>	
Nº	Description
52478	3mm positioning pin (9)
<b>Pivot Post</b>	
Nº	Description
52483	3mm positioning pin (10)

20	End Piece	
Nº	Description	Length
10795	with Shoot bolt 90° restriction	370 - 2350

1	T & T-Drive Gear Fix BS15 FFH		
52405	Size 3 silver	500	1001 - 1250
52406	Size 4 silver	600	1251 - 1500
52407	Size 5 silver	700	1501 - 1750
for balkonery door			
52408	Size 6 silver	1050	1851 - 2100
52410	Size 7 silver	1050	2101 - 2350
option balkonery door T&T Drive Gear lockable BS 30mm			
58442	Size 6 BS 30mm silver	1050	1851 - 2100
54794	Size 7 BS 30mm silver	1050	2101 - 2350

3	Centre Lock	
Nº	Description	Length
54674	Size 400	751 - 1050
54675	Size 528	1051 - 1300
54676	Size 628	1251 - 1500

Note: over SRW 800mm you have to use centre locks

<b>Striker plates</b>	
Nº	Description
354970	Striker (14)
26460	Shoot Bolt Striker (19)