


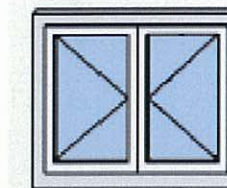


French casement window Turn only
 SRW 280 - 1300, SRH 900 - 2350
 Rehau S921 Prestige Design



Nº	Turn only top hinge	Nº	End piece top
52462	for PVC (5)	11032	with Striker (18)

Nº	Sissor Stay Hinge PVC
52480	with positioning pin 3mm silver (7)
52486	Rebated Sissor Stay Arm 12/20-13 (6)
94491	Spindle Bar (8)

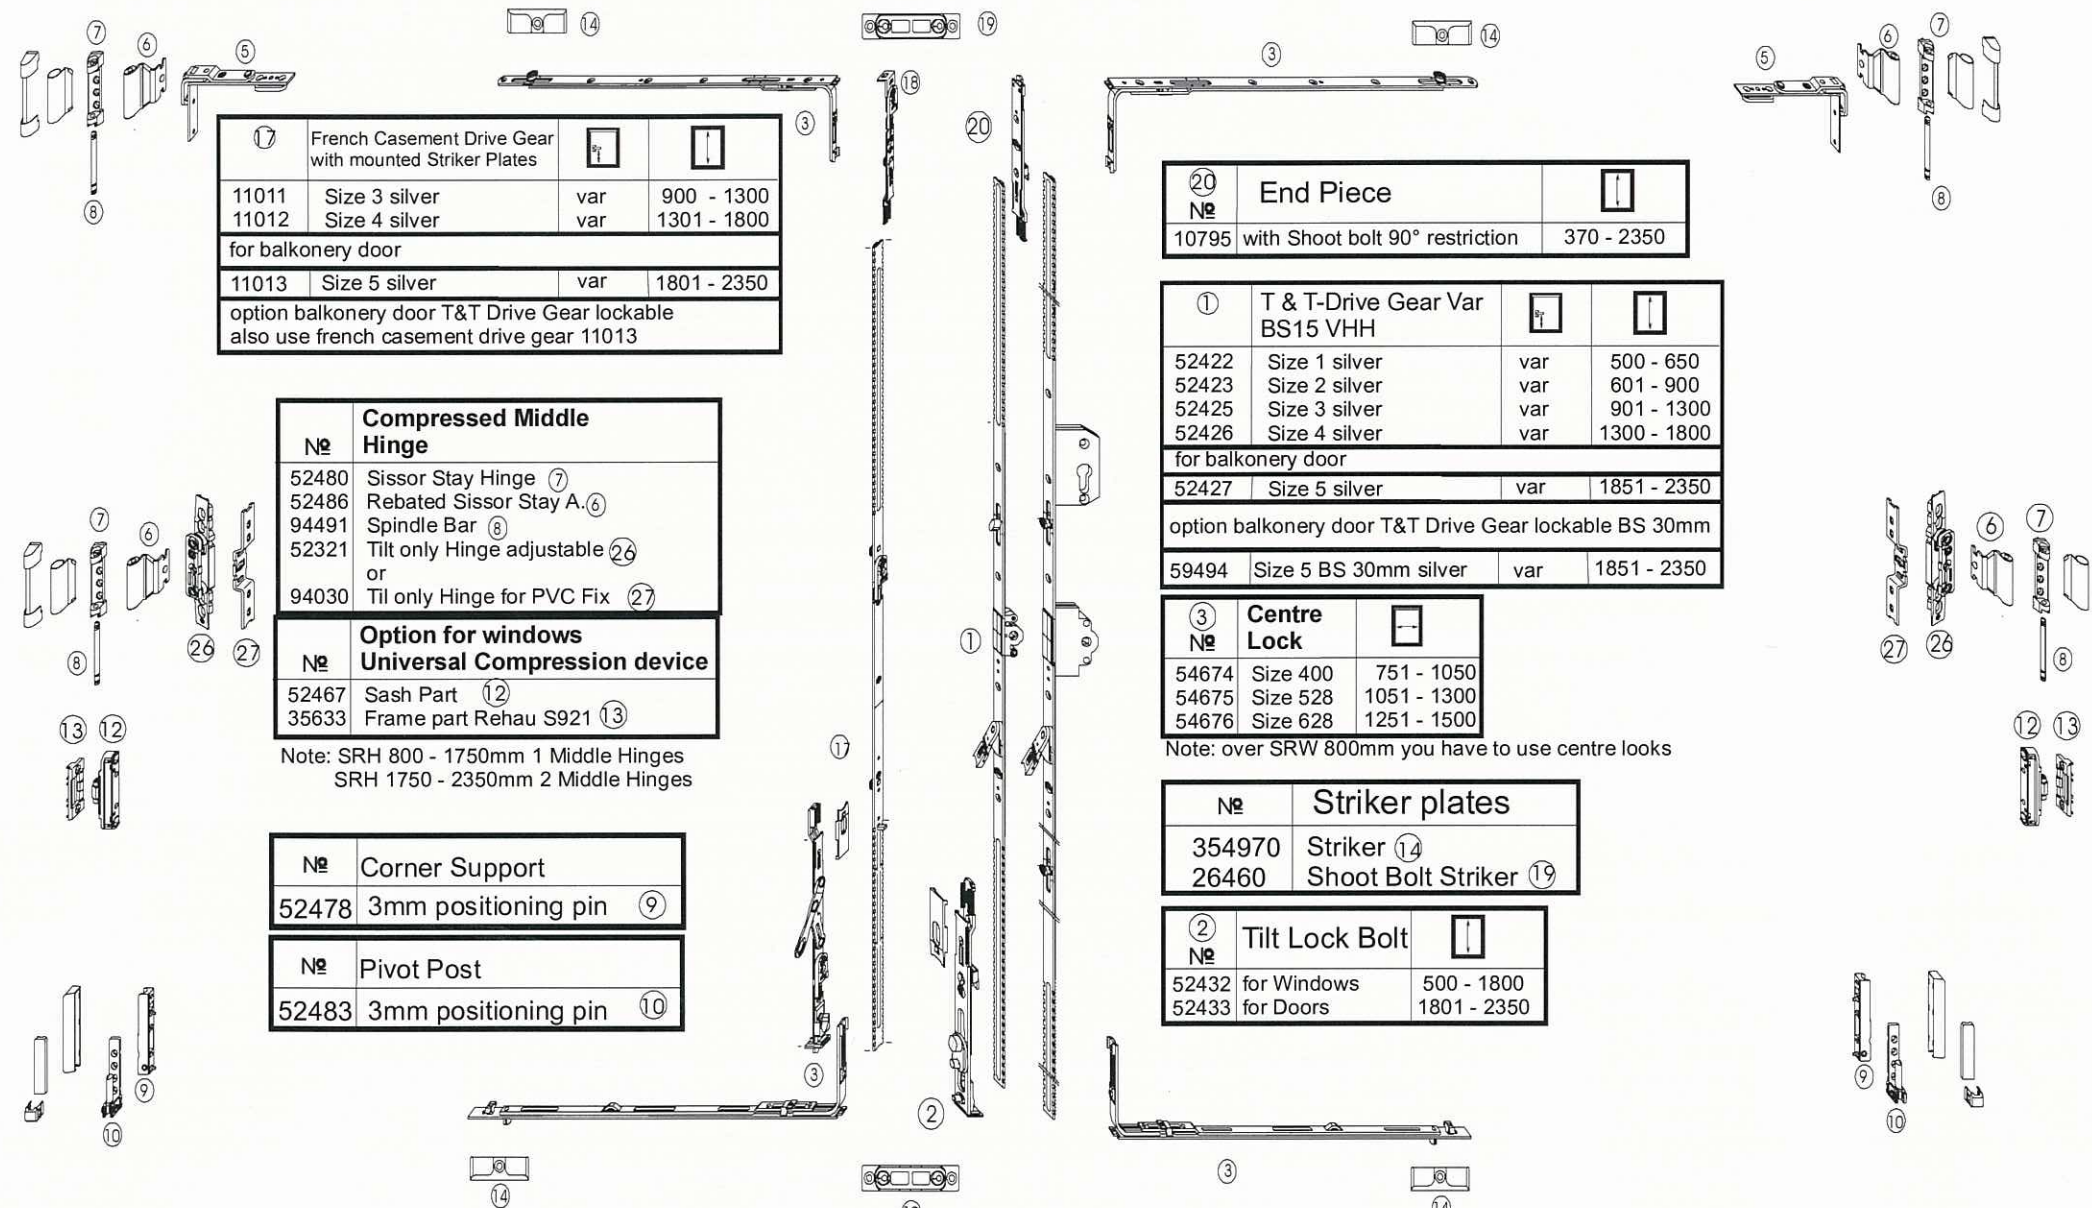

(17)	French Casement Drive Gear with mounted Striker Plates		
11011	Size 3 silver	var	900 - 1300
11012	Size 4 silver	var	1301 - 1800
for balkonery door			
11013	Size 5 silver	var	1801 - 2350
option balkonery door T&T Drive Gear lockable also use french casement drive gear 11013			

(20)	End Piece	
10795	with Shoot bolt 90° restriction	370 - 2350

(1)	T & T-Drive Gear Var BS15 VHH		
52422	Size 1 silver	var	500 - 650
52423	Size 2 silver	var	601 - 900
52425	Size 3 silver	var	901 - 1300
52426	Size 4 silver	var	1300 - 1800
for balkonery door			
52427	Size 5 silver	var	1851 - 2350
option balkonery door T&T Drive Gear lockable BS 30mm			
59494	Size 5 BS 30mm silver	var	1851 - 2350

Compressed Middle Hinge	
Nº	Description
52480	Sissor Stay Hinge (7)
52486	Rebated Sissor Stay A. (6)
94491	Spindle Bar (8)
52321	Tilt only Hinge adjustable (26)
or	
94030	Til only Hinge for PVC Fix (27)
Option for windows Universal Compression device	
Nº	Description
52467	Sash Part (12)
35633	Frame part Rehau S921 (13)

(3)	Centre Lock	
54674	Size 400	751 - 1050
54675	Size 528	1051 - 1300
54676	Size 628	1251 - 1500

Note: SRH 800 - 1750mm 1 Middle Hinges
 SRH 1750 - 2350mm 2 Middle Hinges

Note: over SRW 800mm you have to use centre looks

Nº	Corner Support
52478	3mm positioning pin (9)

Nº	Striker plates
354970	Striker (14)
26460	Shoot Bolt Striker (19)

Nº	Pivot Post
52483	3mm positioning pin (10)

(2)	Tilt Lock Bolt	
52432	for Windows	500 - 1800
52433	for Doors	1801 - 2350